


# AkeToru アケトル

## BC-011 説明書

### 日本語

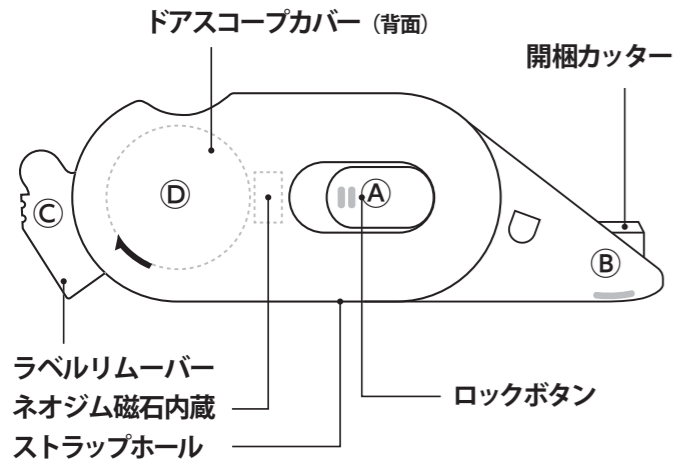

#### 開梱カッターの使い方

- 1 鋭利な部分に注意
- 2 ダンボールの合わせ目に沿ってテープを切ってください。
- 3 使用後は、Aのボタンを下げ、ロックを解除したら、Bの部分を持ってカッターを開きます。

#### ラベルリムーバーの使い方

Cのつまみの部分をスライドさせて、リムーバーを出してテープやラベルの端をめくってください。

#### ドアスコップカバーの使い方

Dの背面のくぼみをドアスコップに被せてください。  
\*ドアスコップの枠が直径16.5mm、厚さ3mm以内で、マグネット貼り付け可能なドアに対応。


#### 替刃式

ストッパーを押しながら矢印の方向にずらして刃を取り出します。  
刃先が欠けたり切れ味が落ちてきた時は、反転してセットすれば新しい刃として使えます。専用替刃(別売) 品番:BC-011H

#### 注意

- 刃物ですので取り扱いや保管には十分ご注意ください。粘着テープや紙などを切ることを目的とした刃物です。本来の目的以外に使用しないでください。
- 使用後は、刃を本体に完全に納め、乳幼児の手の届かない所に保管してください。
- 破損・故障・変形した場合は、使用しないでください。
- 金属・プラスチック等の硬い物には使用しないでください。また落したり刃に無理な力を加えると、セラミック刃が欠ける恐れがありますのでご注意ください。
- マグネット部分を電子機器・時計・磁気カードなどの磁気の影響を受ける恐れのあるものに近づけないでください。

### English

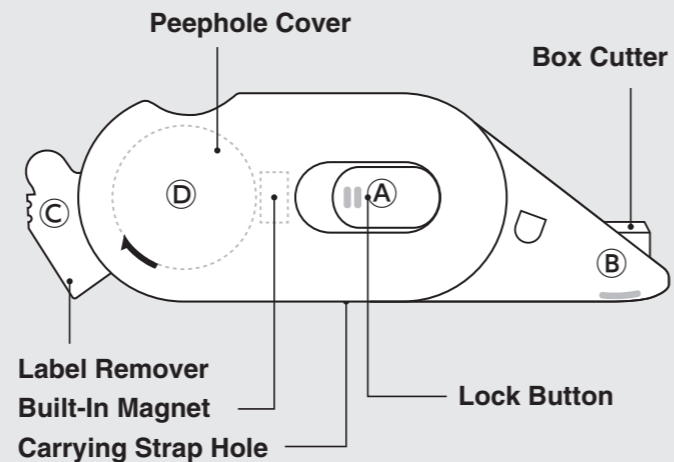

#### How to Use the Box Cutter

- 1 Slide down button A to unlock the cutter and pull the blade open.
- 2 When opening a box, cut tape along the grain of the cardboard.
- 3 After use, slide down button A to unlock the cutter and fold down the blade until closed securely.

#### How to Use the Label Remover

Pull on the knob at the top of the cutter to expose the label remover. Use the spatula-like tool to peel back the edges of any tape or labels.

#### How to Use the Peephole Cover

Place the cutter on the back of the door, using the round indentation to cover the peephole.  
\*Compatible with peephole frames up to 16.5 mm in diameter and 3 mm thick on magnet-compatible doors.


#### Replaceable Blade

If the blade is chipped or dull, remove it by pushing down the stopper and sliding it in the direction of the arrow. The blade can then be rotated and resecured for a fresh cutting edge, or a replacement blade can be purchased separately. Product number:BC-011H

#### Attention

- This is a bladed tool. Please handle and store with care. The blade is designed to cut adhesive tape, paper, and similar materials. Do not use the blade for anything other than what is intended.
- After use, fold the blade completely back into the main body. Keep out of reach of infants and children.
- Do not use the tool if it is damaged, broken or deformed.
- Do not use on hard materials such as metal or plastic. Dropping the tool or applying excessive force when cutting may chip the ceramic blade.
- Do not place the magnet near electronic devices, watches, magnetic cards, or other items that may be affected by magnetism.

### 繁體中文

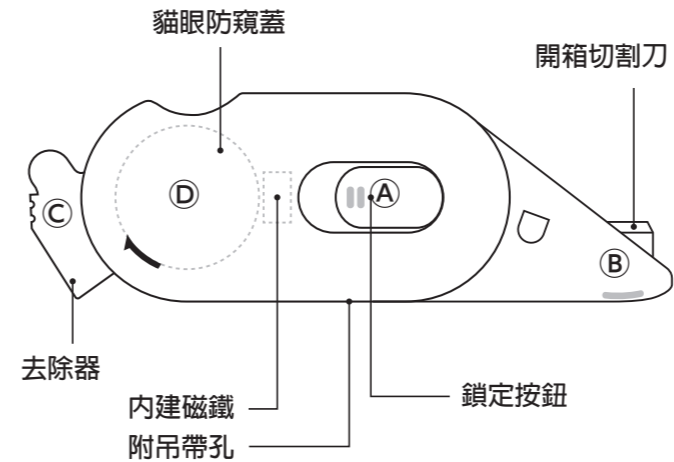

#### 開箱切割刀的使用方法

- 1 將A的按鈕往下扳，解鎖之後，打開刀片基座。
- 2 開箱時，請沿著瓦楞紙箱的縫隙，切割膠帶。
- 3 使用後，請將A的按鈕往下扳，解鎖之後，折疊刀片關上。

#### 去除器的使用方法

請滑動把手的部分，推出去除器，掀起膠帶或標籤的邊緣。

#### 貓眼防窺蓋的使用方法

請將背面的凹處覆蓋貓眼。  
\*支援直徑16.5mm厚3mm的貓眼尺寸


#### 替換式

刀尖缺損或變鈍時，反轉安裝，即可作為新的刀刃使用。  
專用替換刀刃(另售) 品號:BC-011H  
按著固定器，往前頭方向移動，取出刀刃。

#### 警告

- 刀刃銳利。請小心使用及保管。
- 本體有損壞、變形、故障的情況下，請勿使用。
- 使用過的刀刃請遵從您居住的地區的地方政府的指示，安全地處理。
- 請存放於嬰幼兒拿不到的地方。
- 請避免存放於高溫高濕的地方，或者陽光直射的地方。

### 한국어

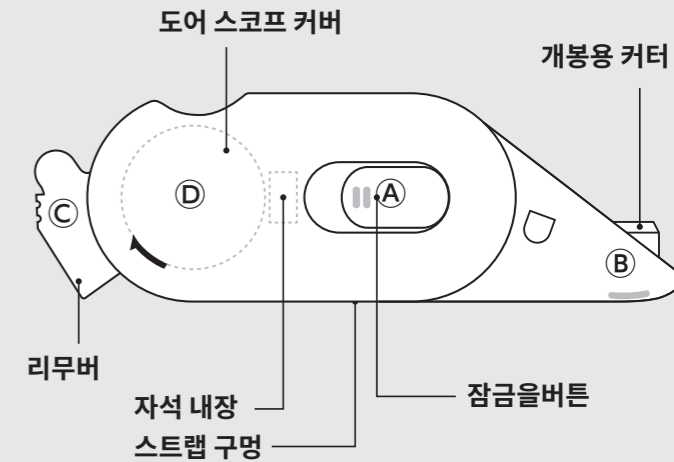

#### 개봉용 커터 사용법

- 1 A버튼을 내려 잠금을 해제한 후 커터부를 엽니다.
- 2 봉할 때는 종이 박스 결에 따라 테이프를 잘라 주십시오.
- 3 사용이 끝나면 A 버튼을 내려 잠금을 해제한 후 개봉용 커터부를 접어서 넣어 주십시오.

#### 리무버 사용법

손잡이 부분을 슬라이드하여 리무버를 꺼내 테이프나 라벨 가장자리를 떼어 주십시오.

#### 도어 스코프 커버 사용법

뒷면의 오목한 부분을 도어 스코프에 씌워 주십시오.  
\*테두리 직경 16.5mm, 두께 3mm의 도어 스코프에 대응

#### 칼날 교환형

스토퍼를 누르며 화살표 방향으로 밀어 칼날을 꺼냅니다.  
칼날 끝이 깨졌거나 무디어졌을 때는 반대로 돌려 끼우면 새 칼날로 사용할 수 있습니다. 전용 교환용 칼날(별매)품번: BC-011H  
스토퍼를 누르며 화살표 방향으로 밀어 칼날을 꺼냅니다.

#### 주의

- 칼날이 달려 있으므로 다루거나 보관할 때는 충분히 주의해 주십시오. 짐차 테이프나 종이 등을 자르는 목적인 칼날입니다. 본래 목적이 아닌 다른 용도로 사용하지 마십시오.
- 사용이 끝나면 칼날을 본체에 완전히 접어 놓은 후, 영유아의 손이 닿지 않는 장소에 보관해 주십시오.
- 파손, 고장, 변형되었다면 사용하지 마십시오.
- 금속, 플라스틱 등의 단단한 물체에는 사용하지 마십시오. 또한 떨어뜨리거나 칼날에 억지로 힘을 가하면 세라믹날이 깨질 우려가 있으므로 주의해 주십시오.
- 자석부를 전자기기, 시계, 자기 카드 등 자기의 영향을 받을 우려가 있는 물건 가까이 두지 마십시오.